




Assembly instruction

B02






cassette with concealed door frame for
100 mm drywall double





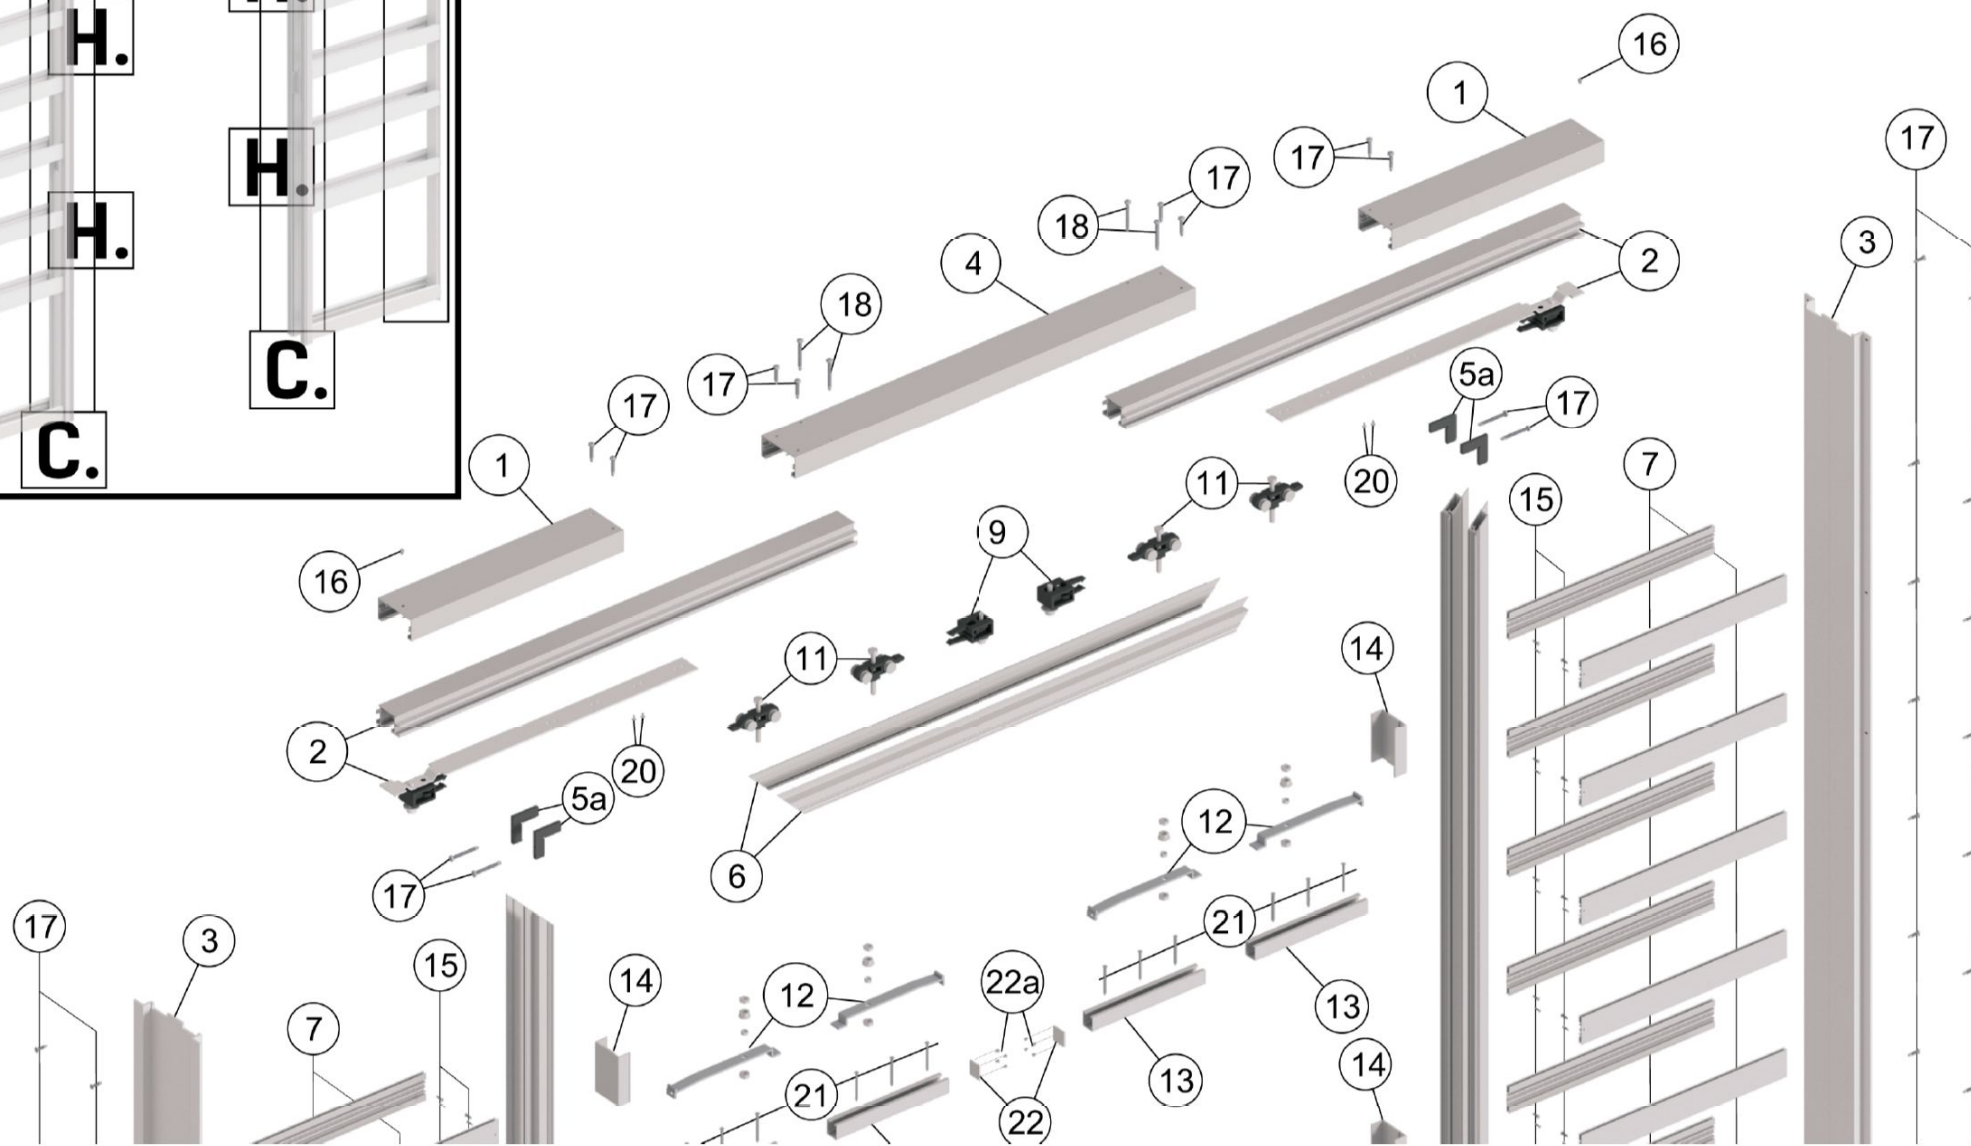


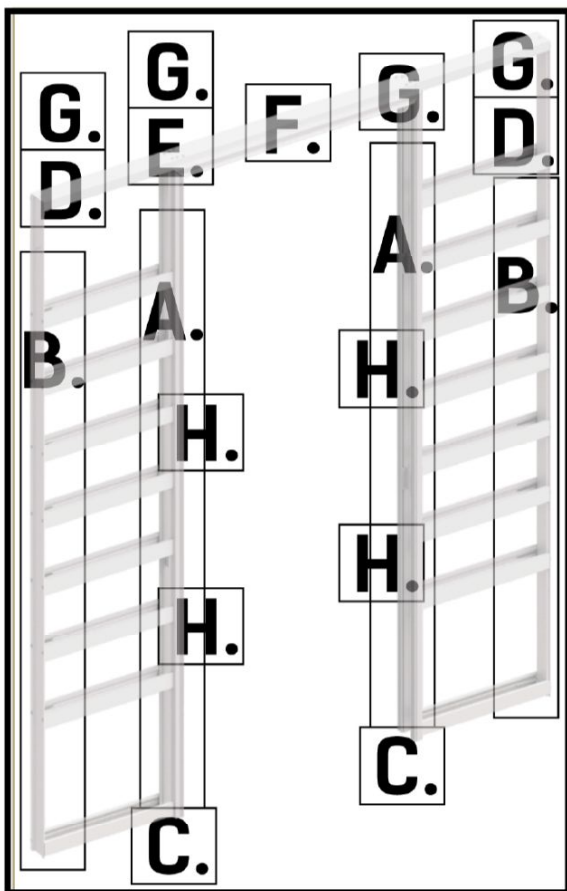




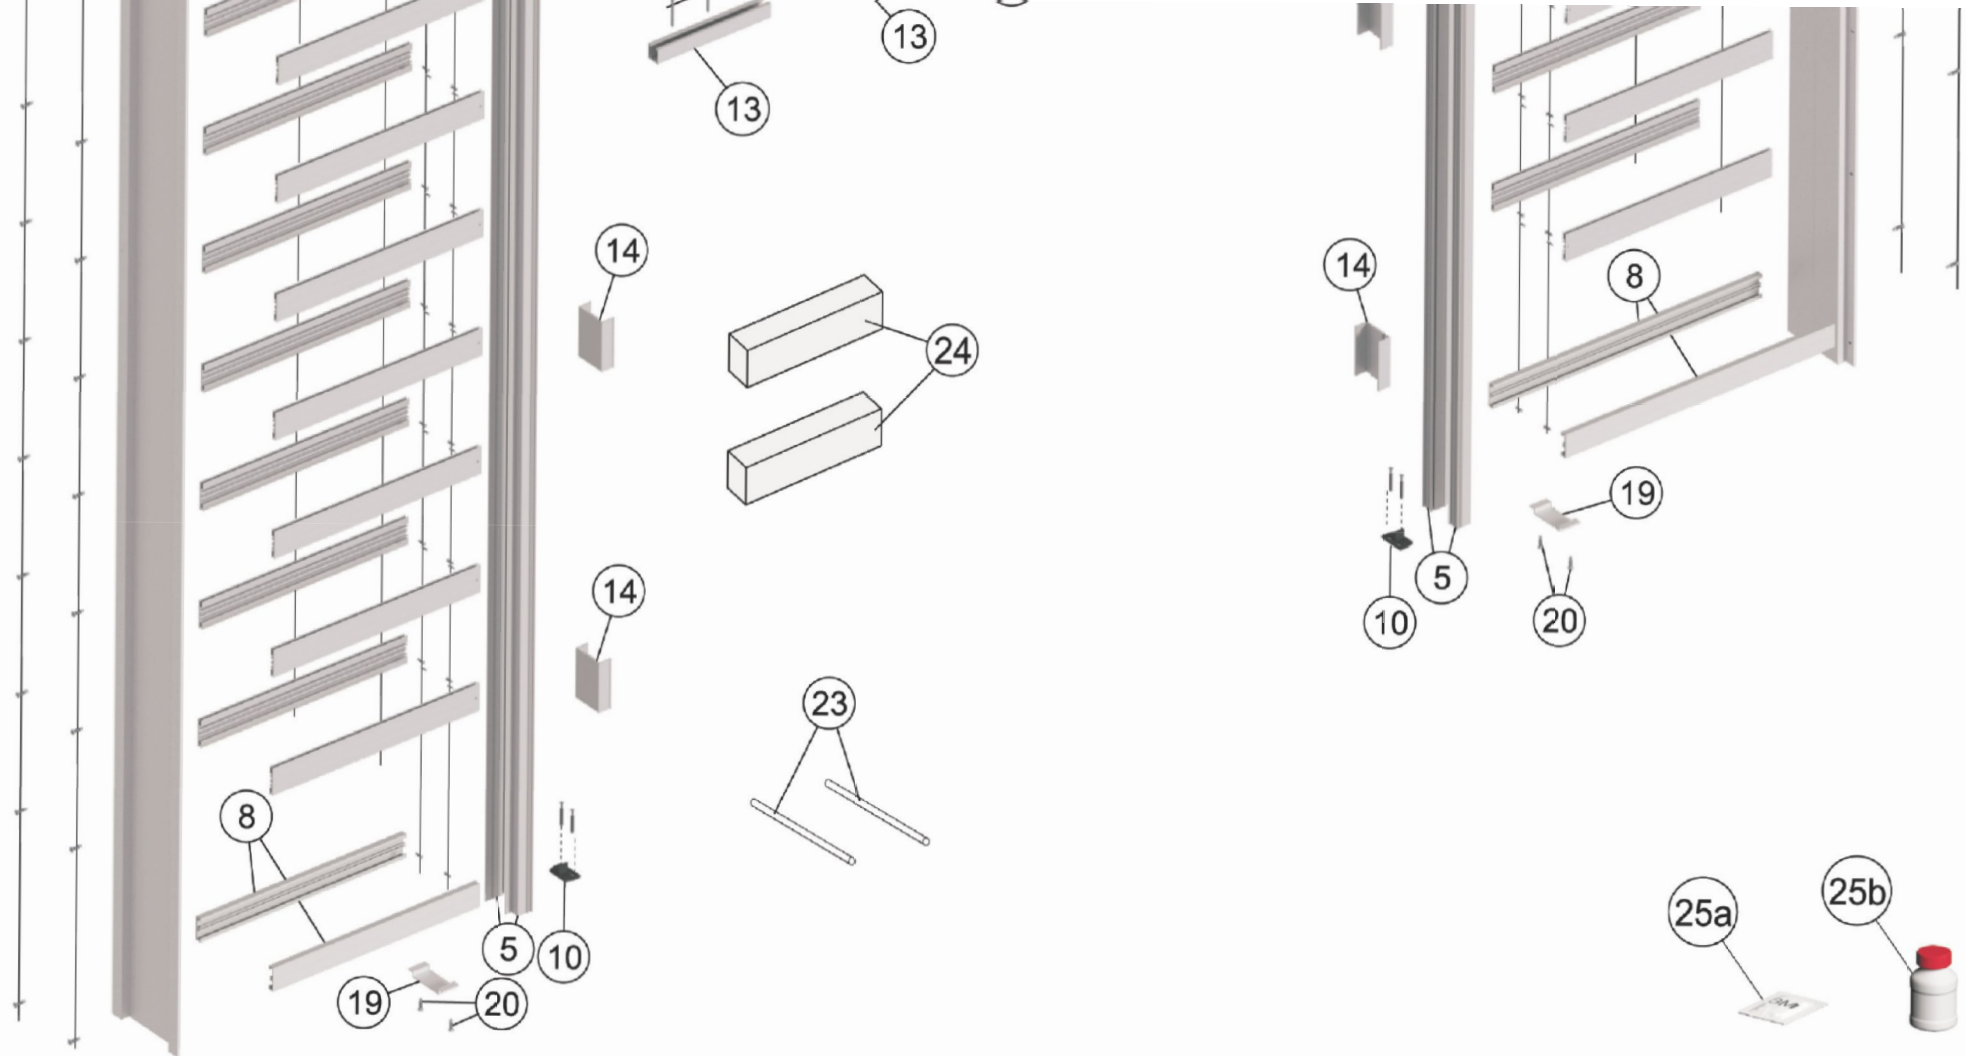





①		x 2	⑨		x 2	⑰	 $\varnothing$ 3,9x18 min. x 40	②⑤	a.  x 2 b.  x 1
②	 +  + 	x 2	⑩	 x 2 +  x 8		⑱	 $\varnothing$ 4,2x50 x 4		
③		x 2	⑪	 +  + 	x 4	⑲	 +  6x35 x 2		
④		x 1	⑫	 +  + 	x 4	⑳	 $\varnothing$ 3,9x9,5 x 8		
⑤	 + a. 	x 4	⑬		x 4	㉑	 $\varnothing$ 5x35 x 12		
⑥	 + 	x 2	⑭		x 6	㉒	 x 2 a.  2,2x9,5 x 8		
⑦		min. x 20	⑮	 $\varnothing$ 4,2x9,5 min. x 44		㉓	 $\varnothing$ 4 mm x 2		
⑧		x 4	⑯	 $\varnothing$ 3,5x9 x 2		㉔		x 2	

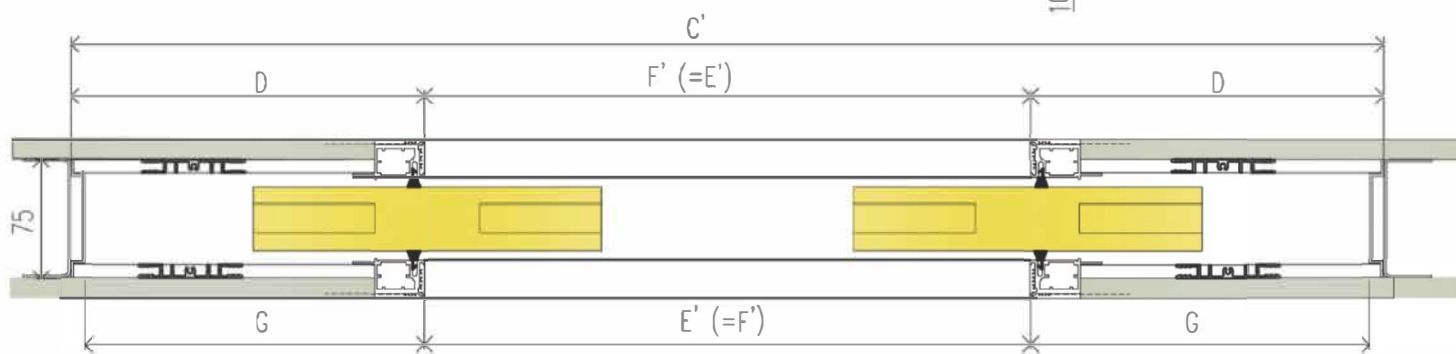
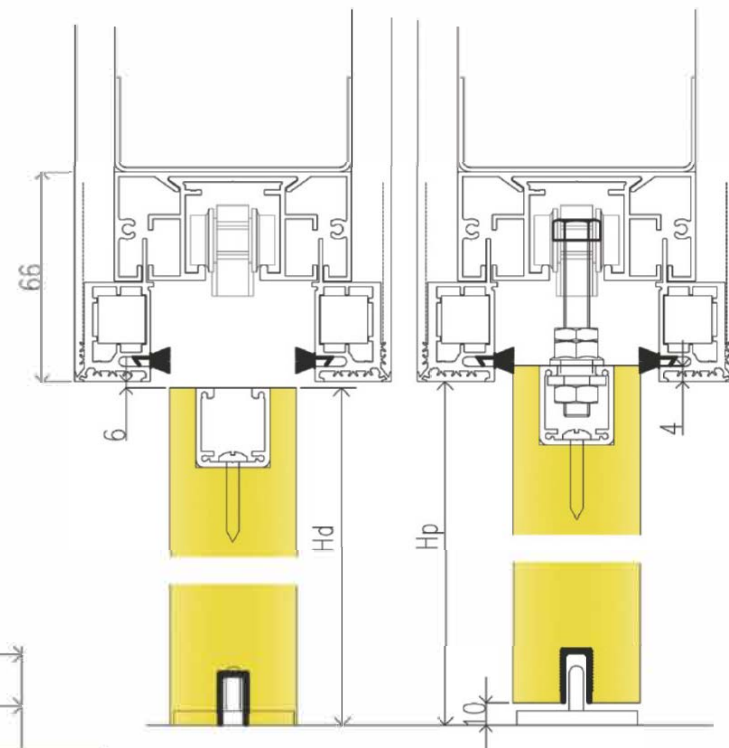
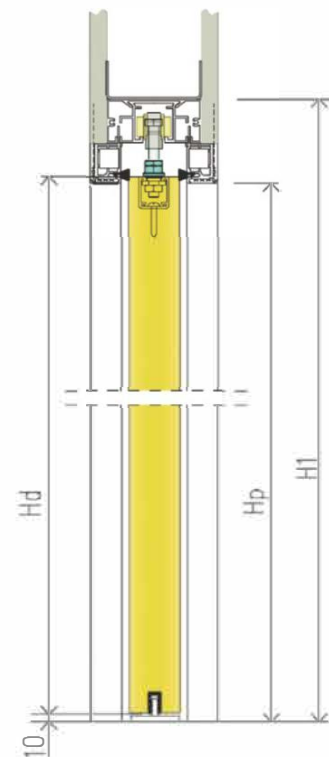
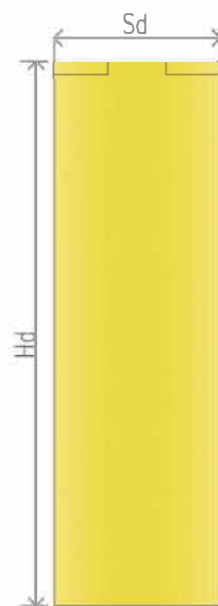
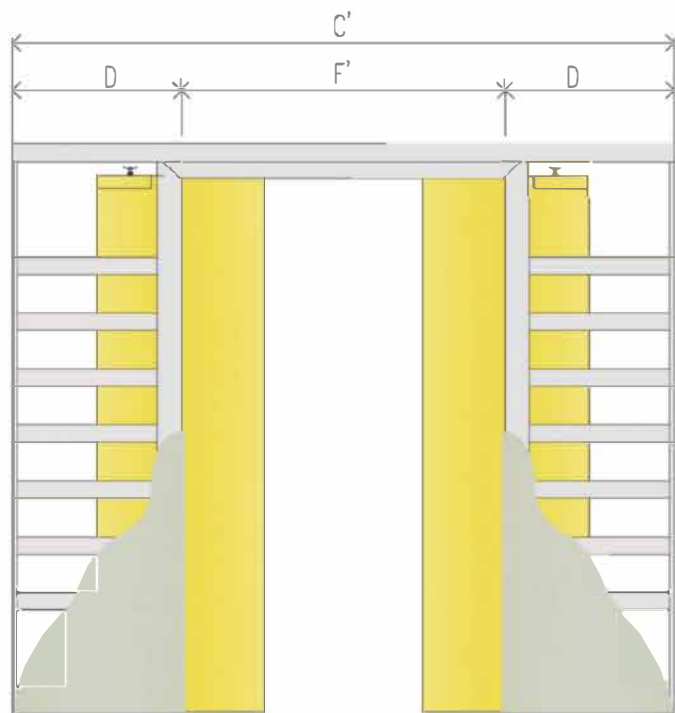


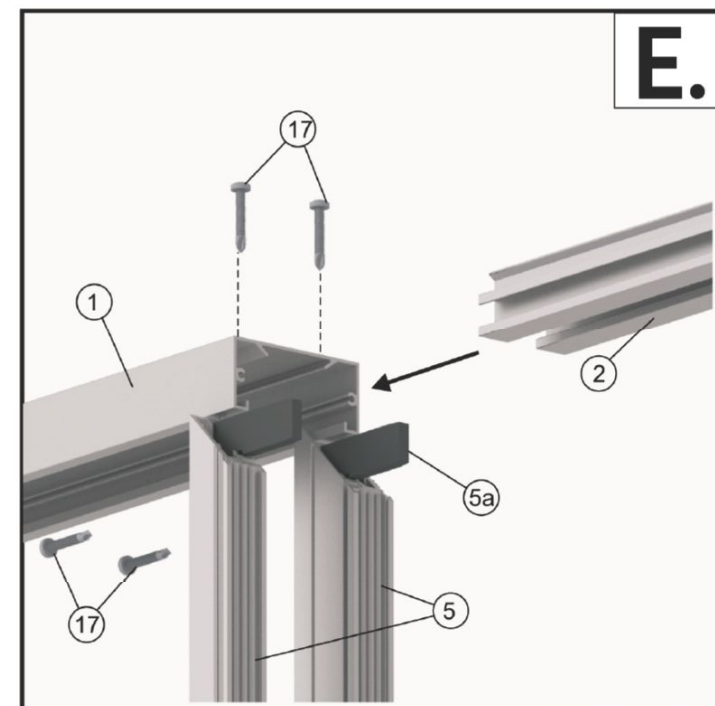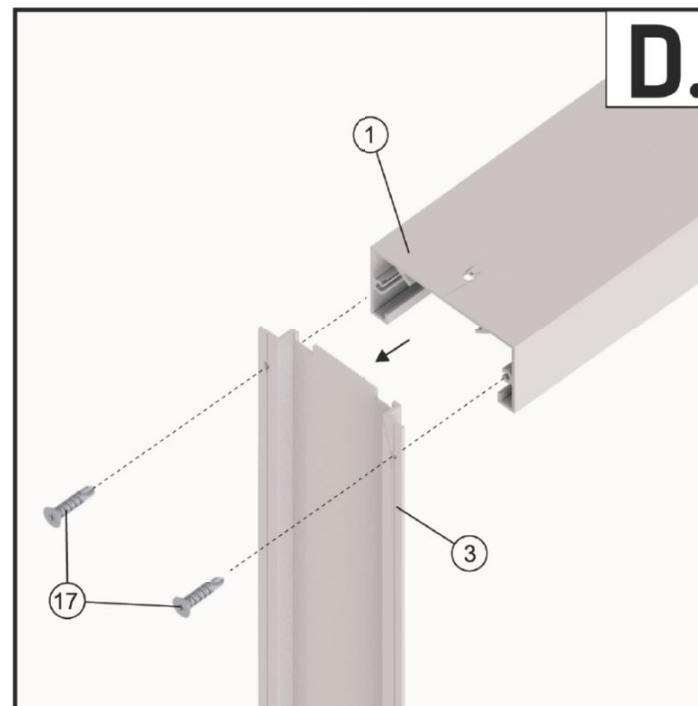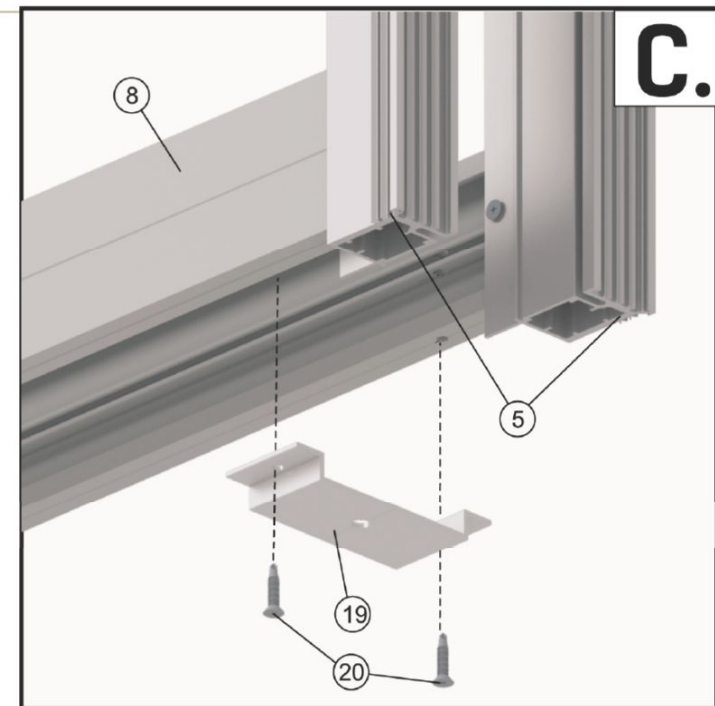
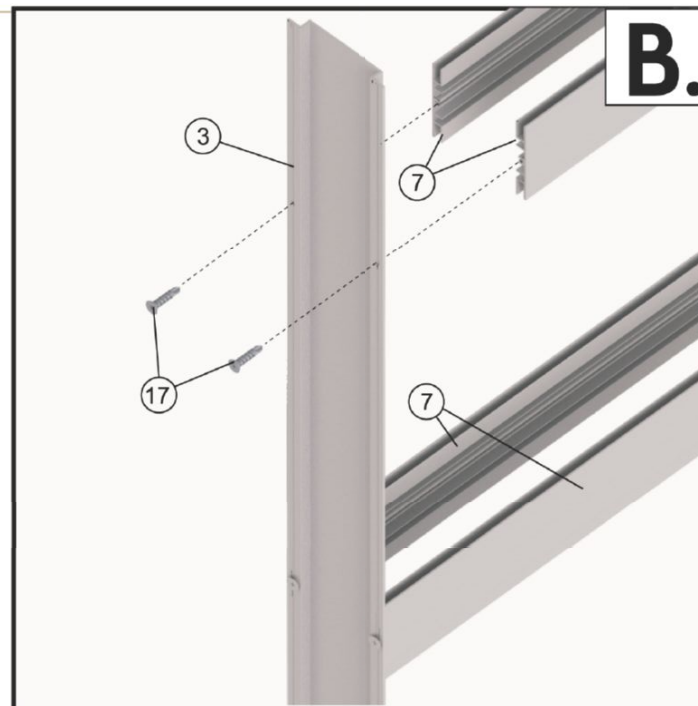
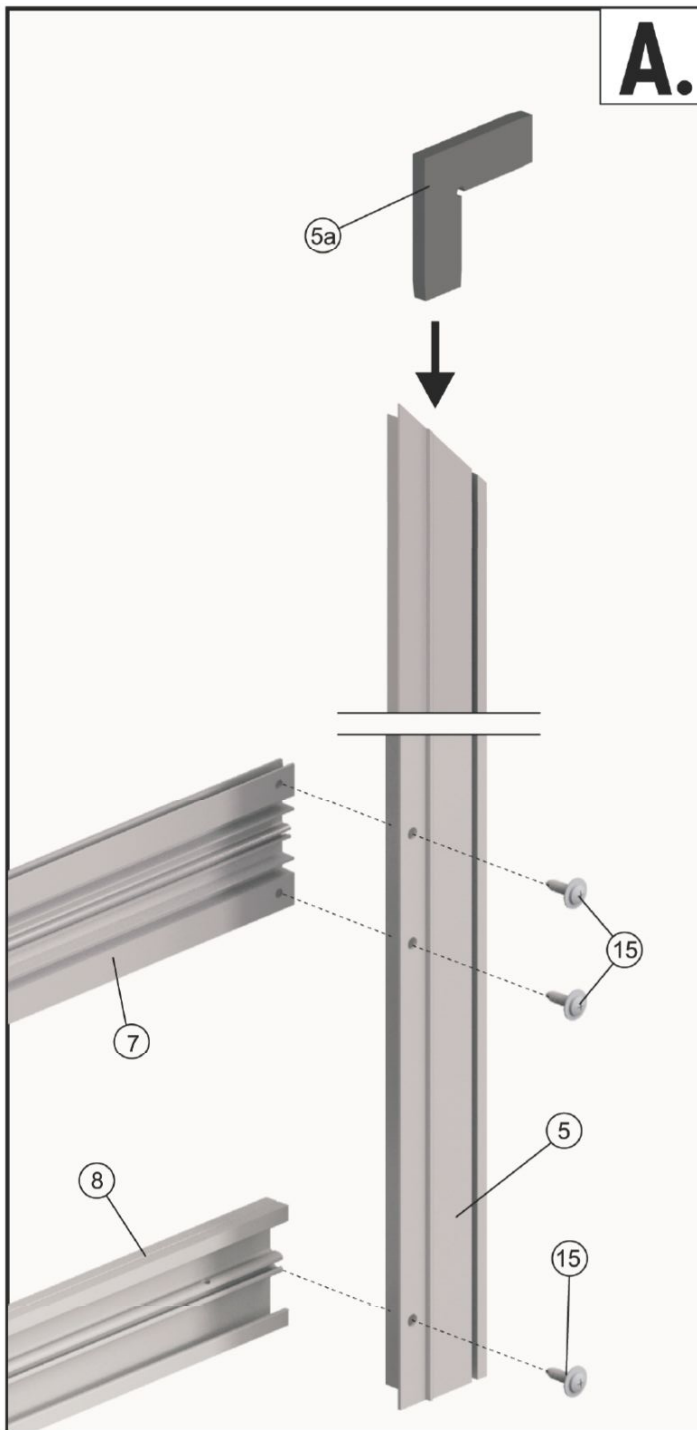


1 Note: Prior to installation, check the tightening of the screws on the slider stopper [2]

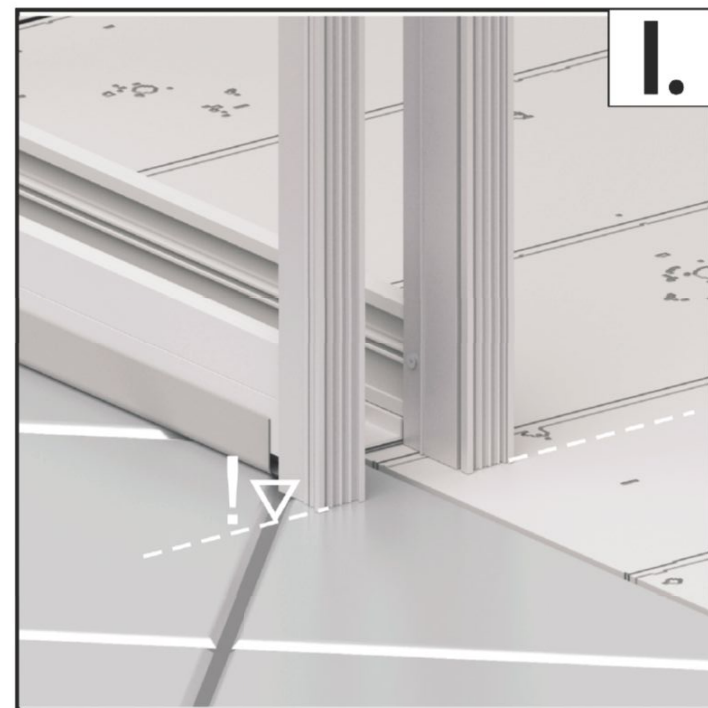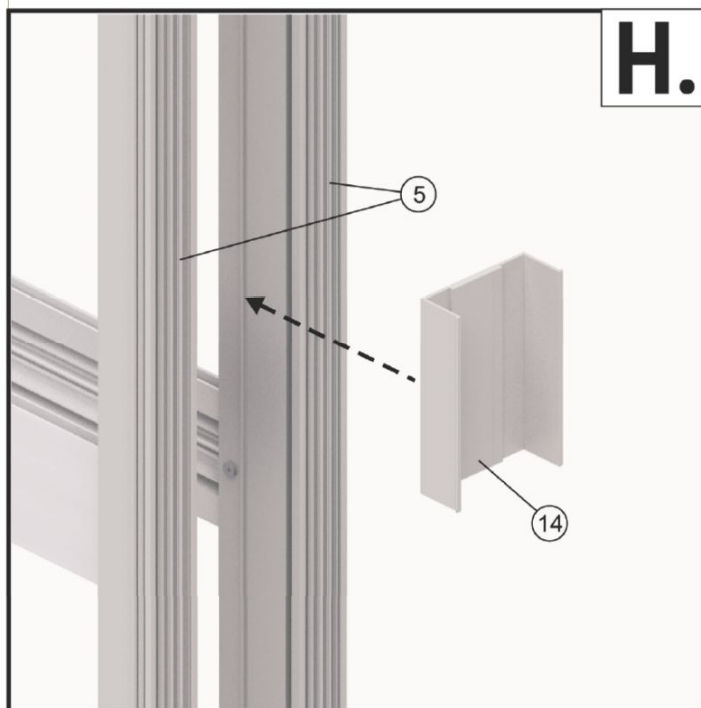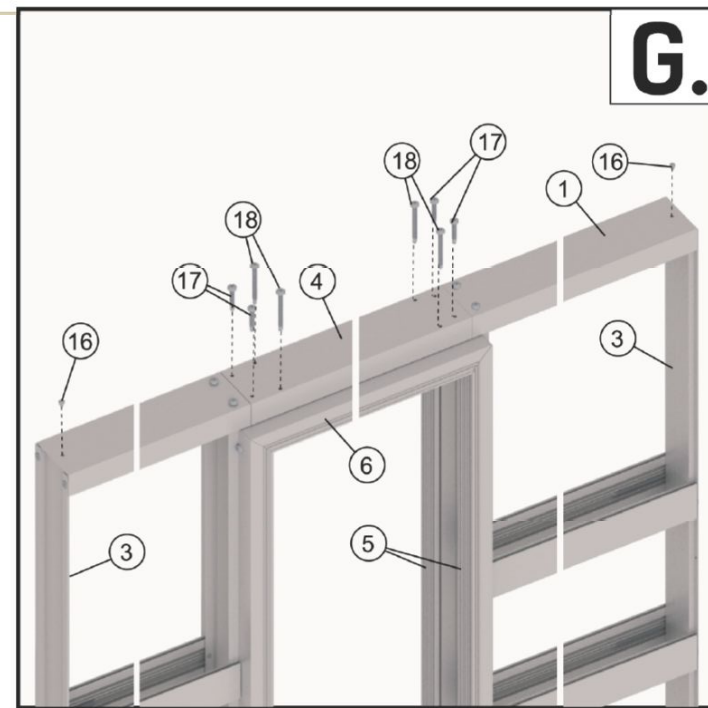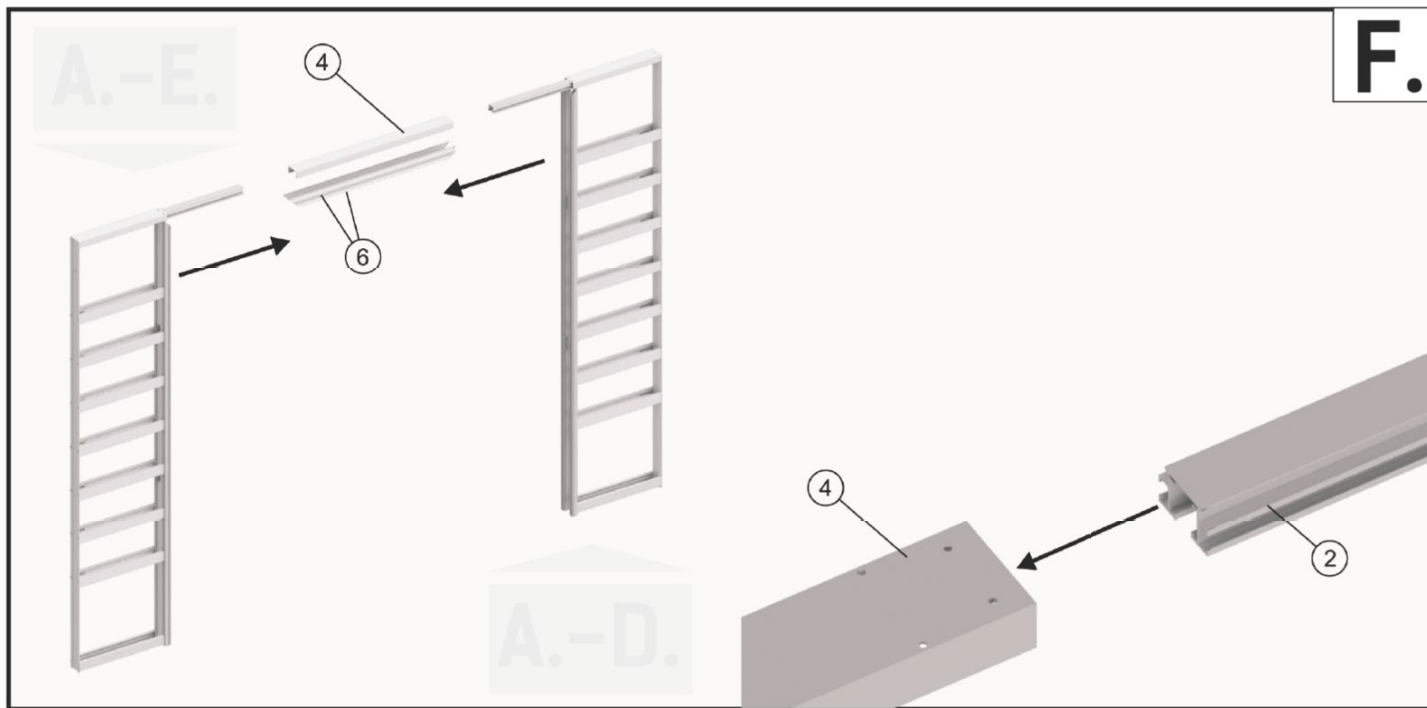

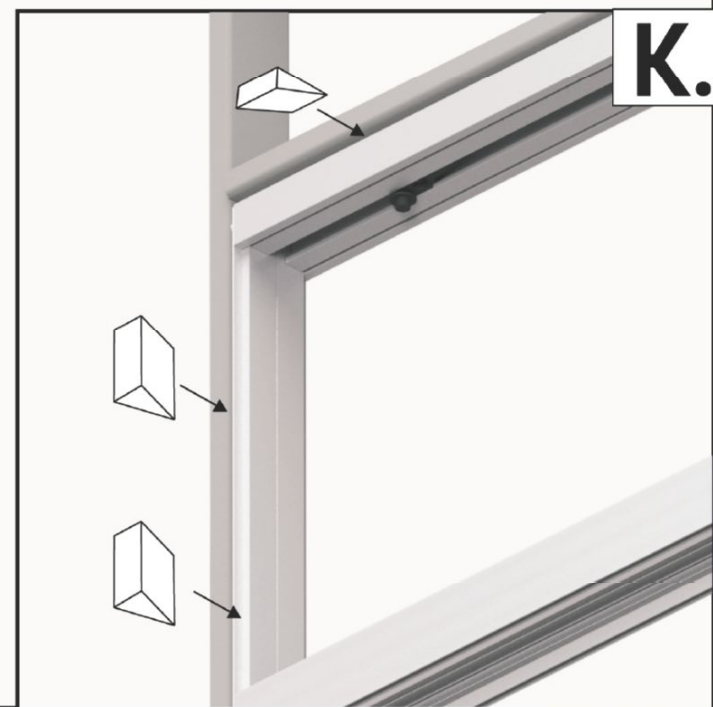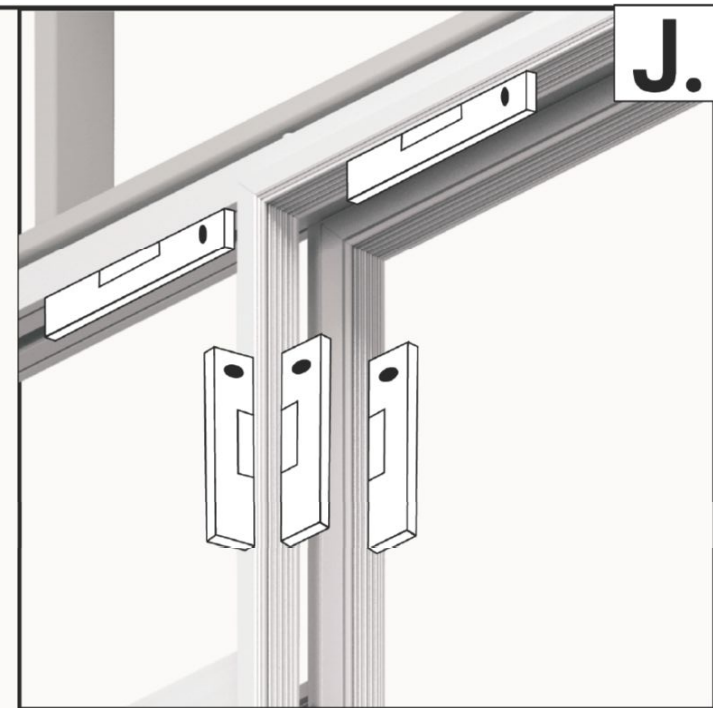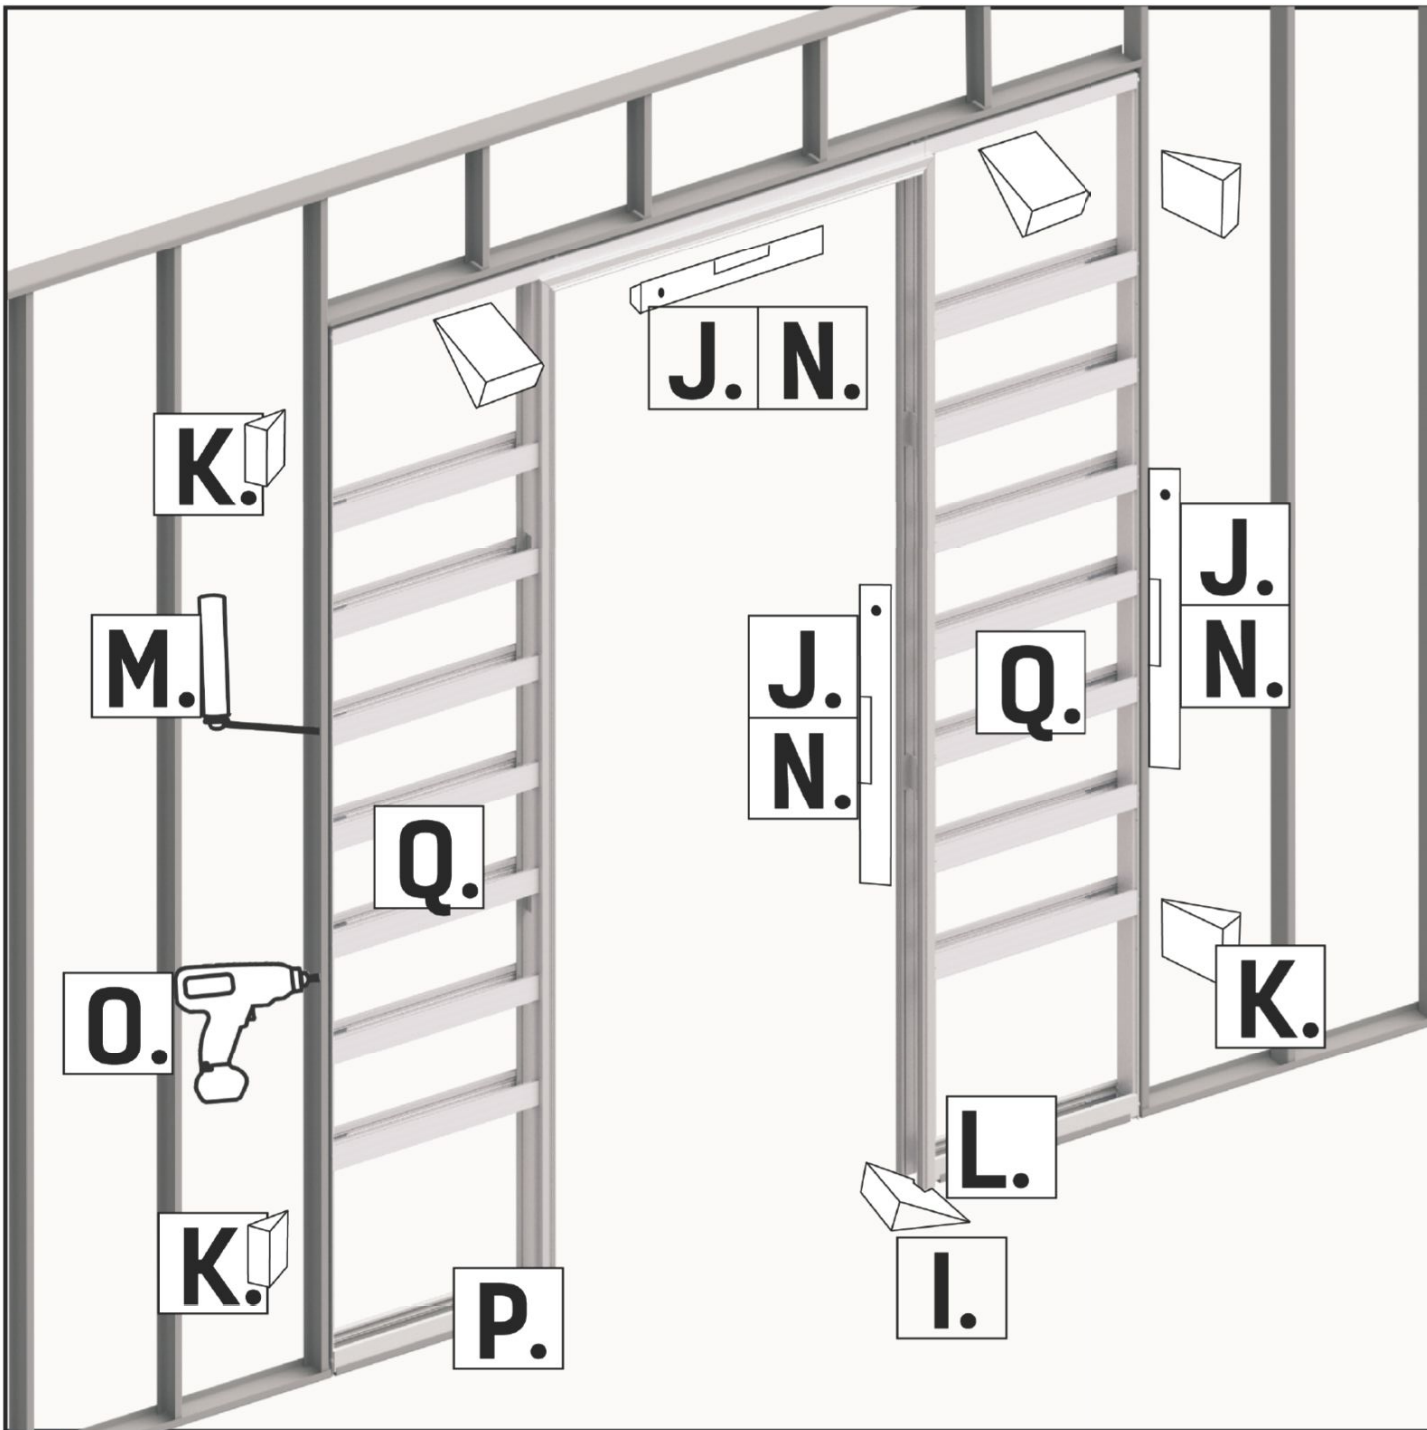

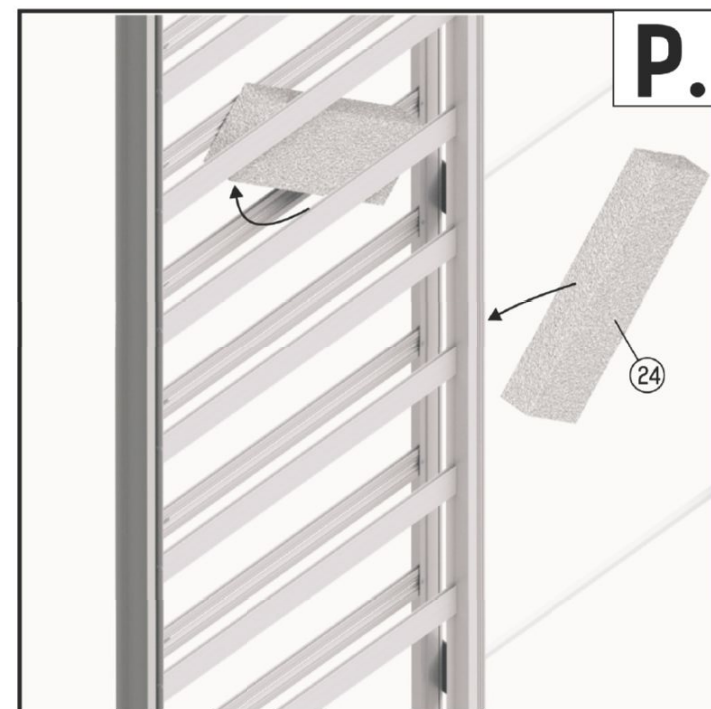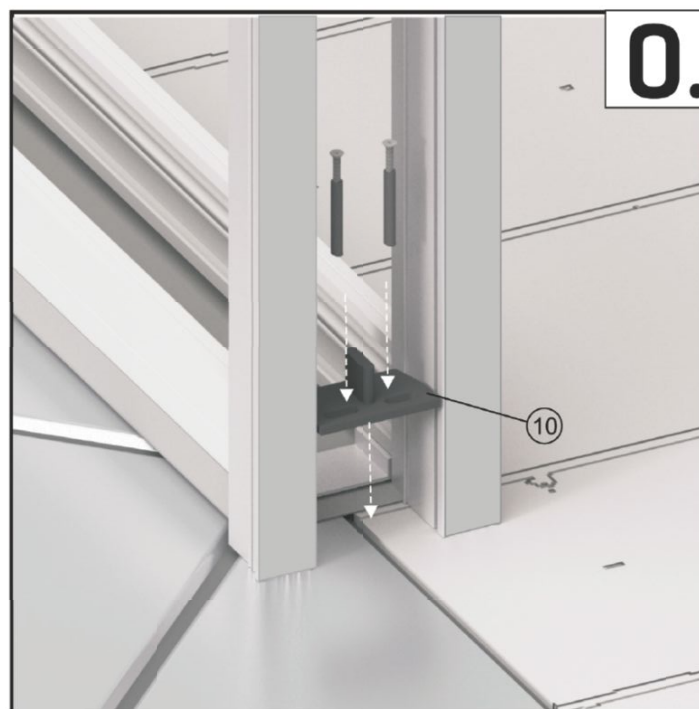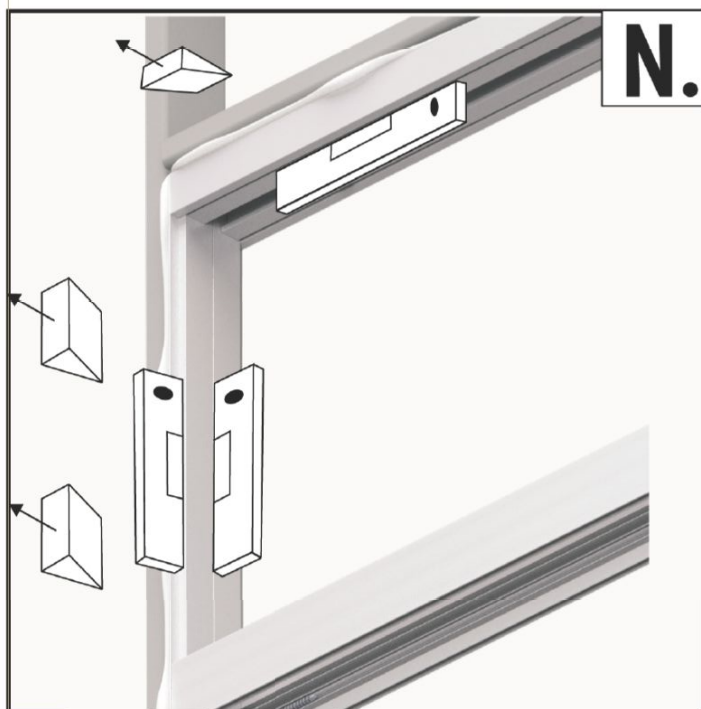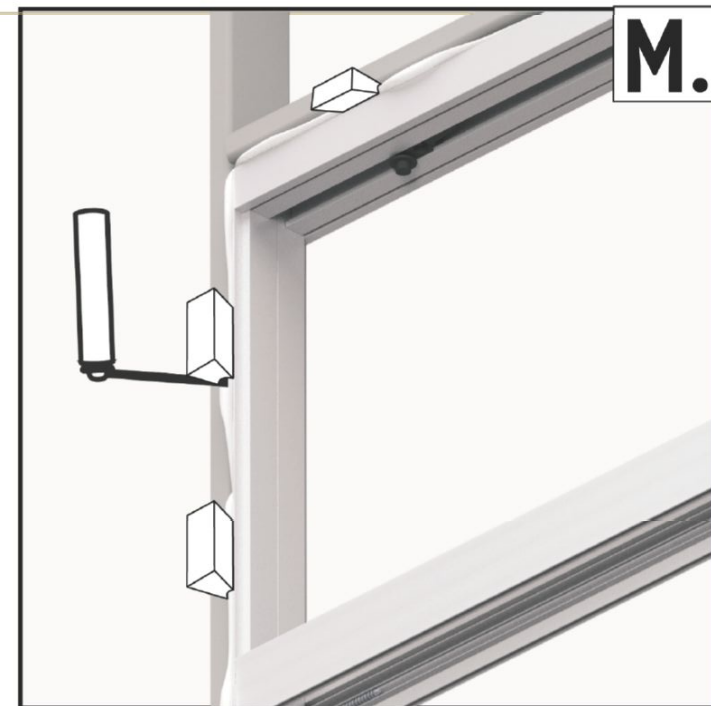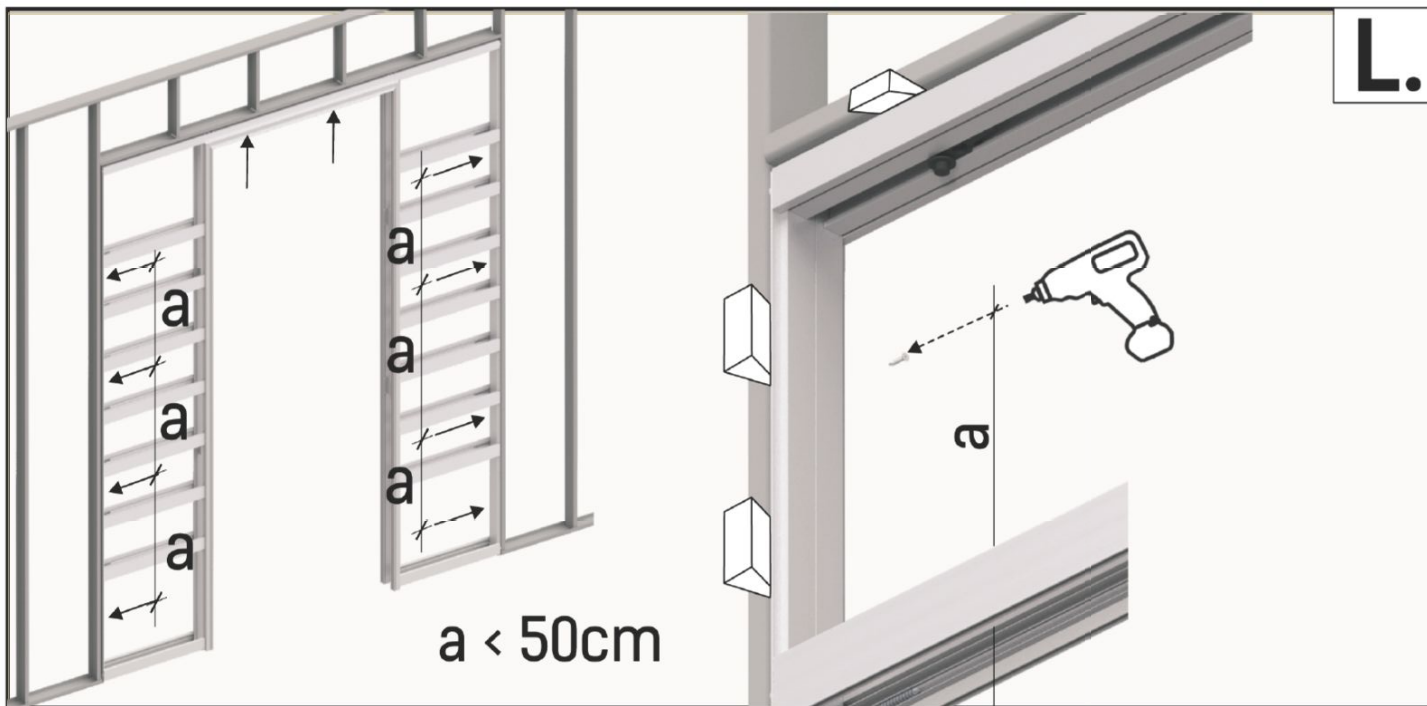


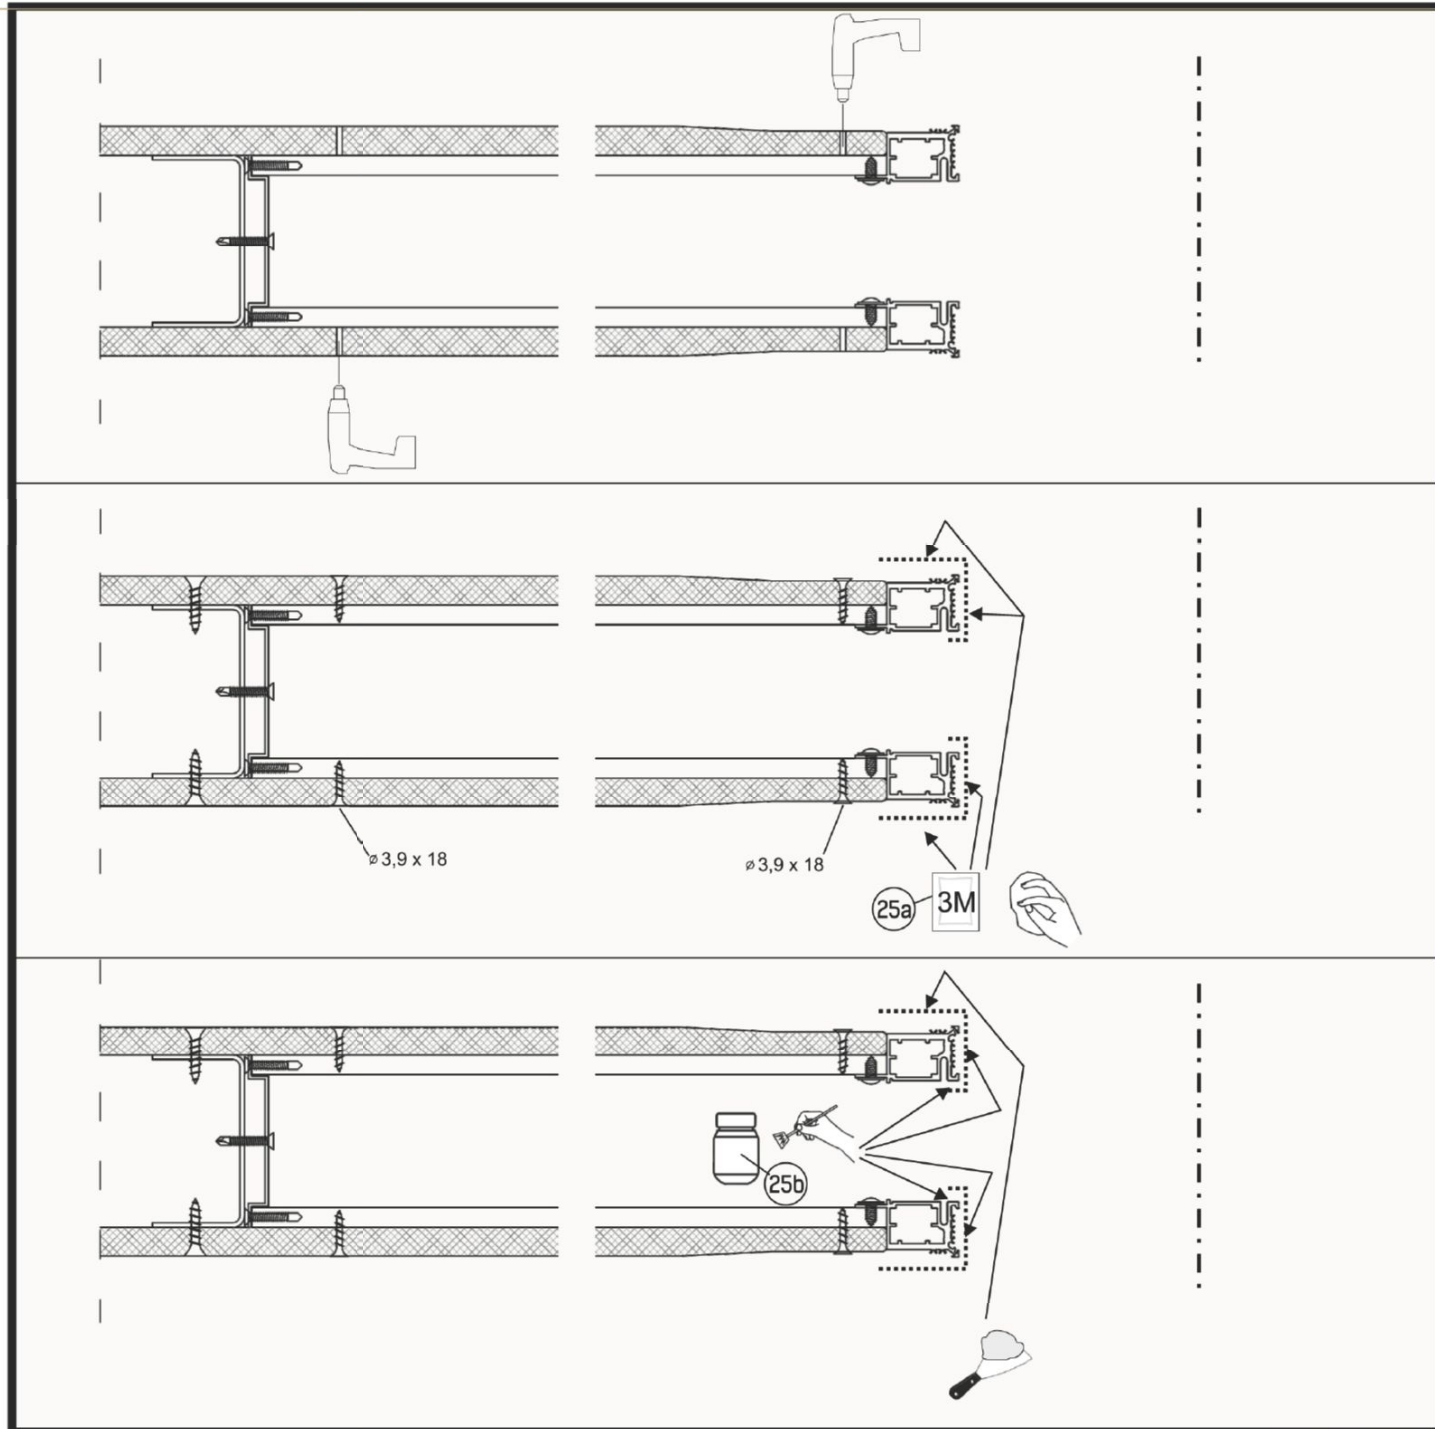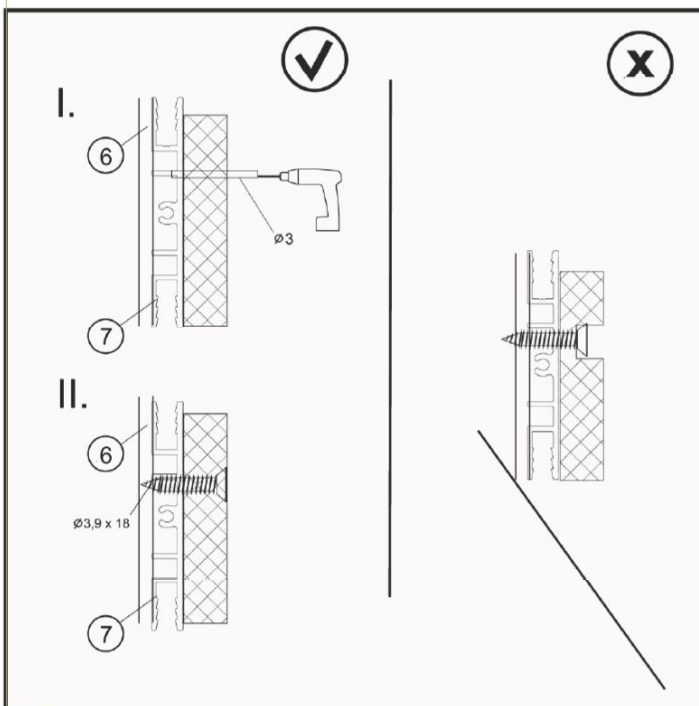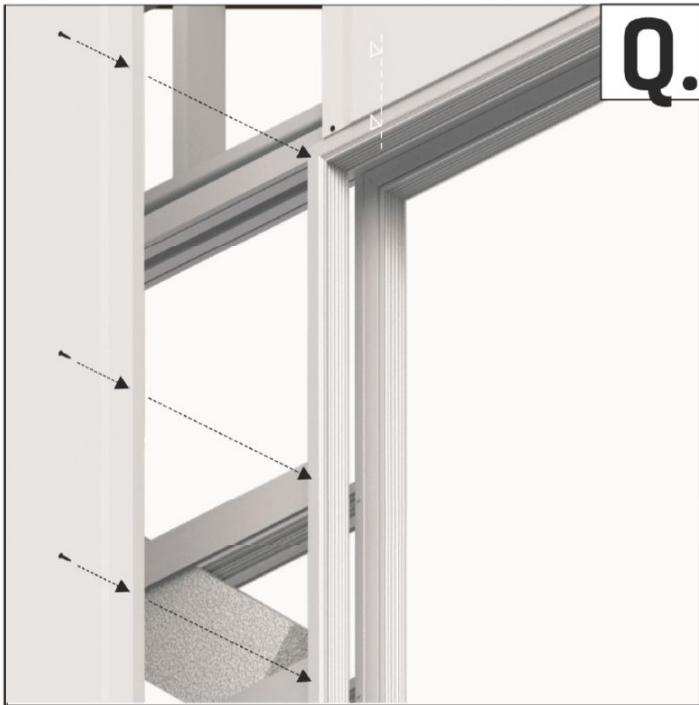


* opcja / option / varianta / volba / вариант



SOFT
CLOSING

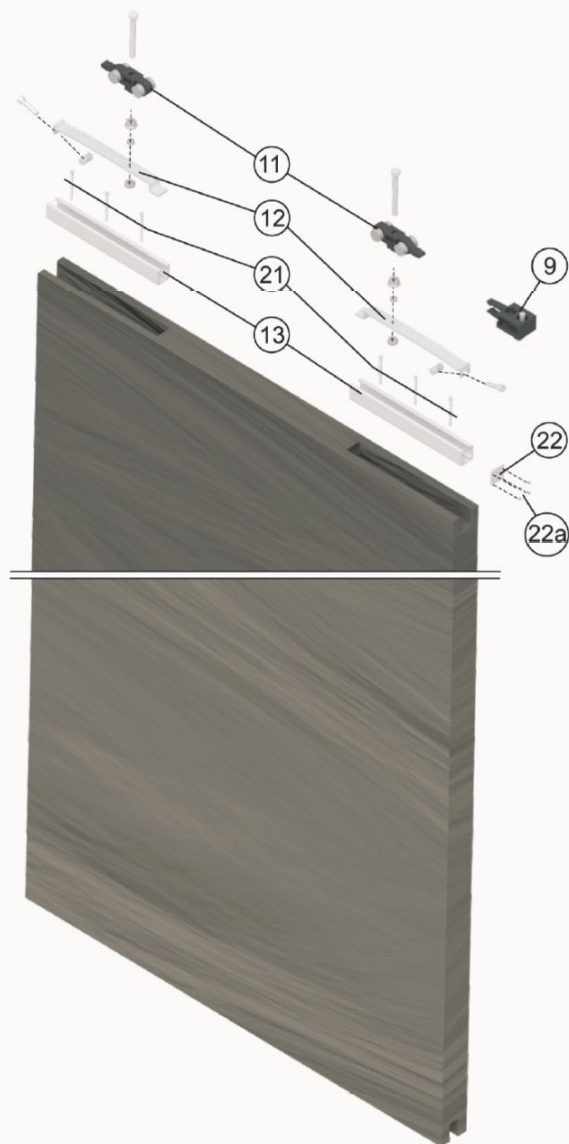

d.-f.

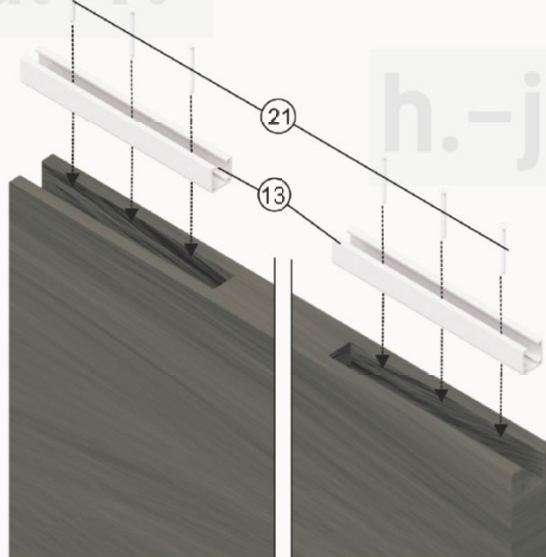


h.-j.

a.










b.





c.



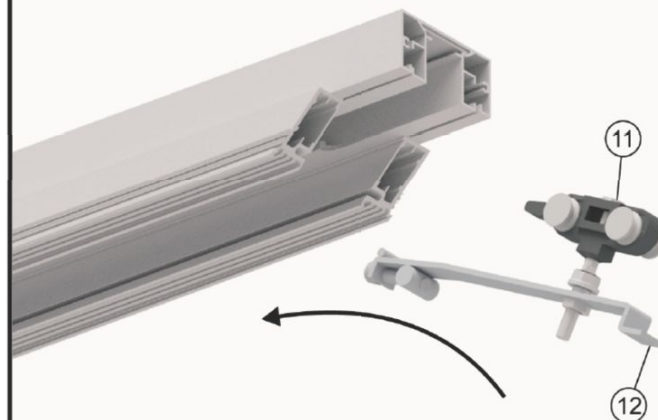




d.



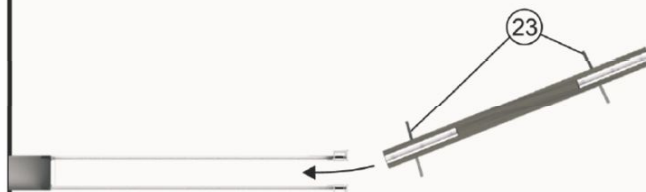


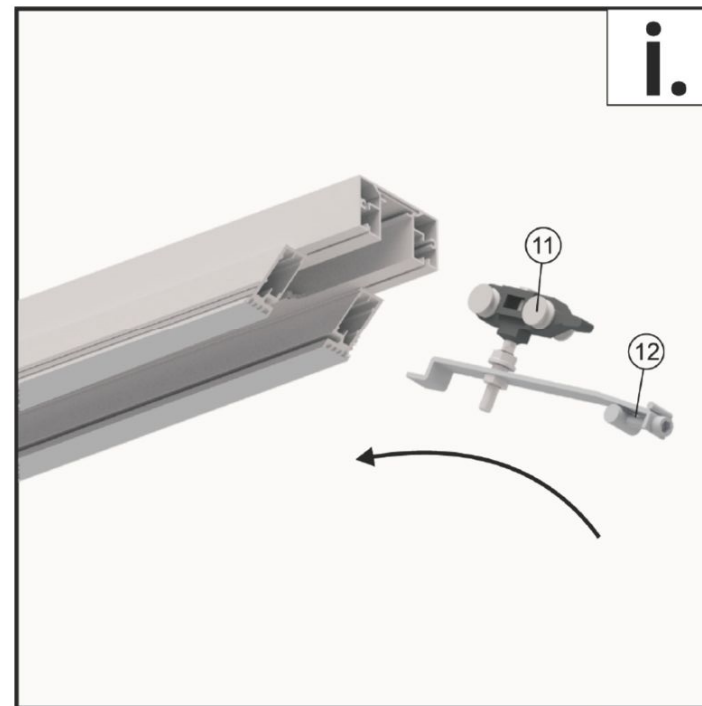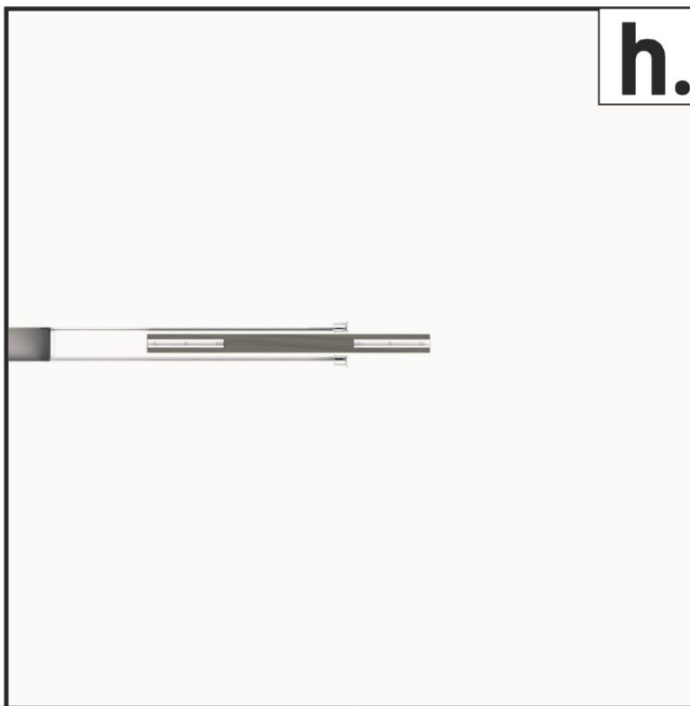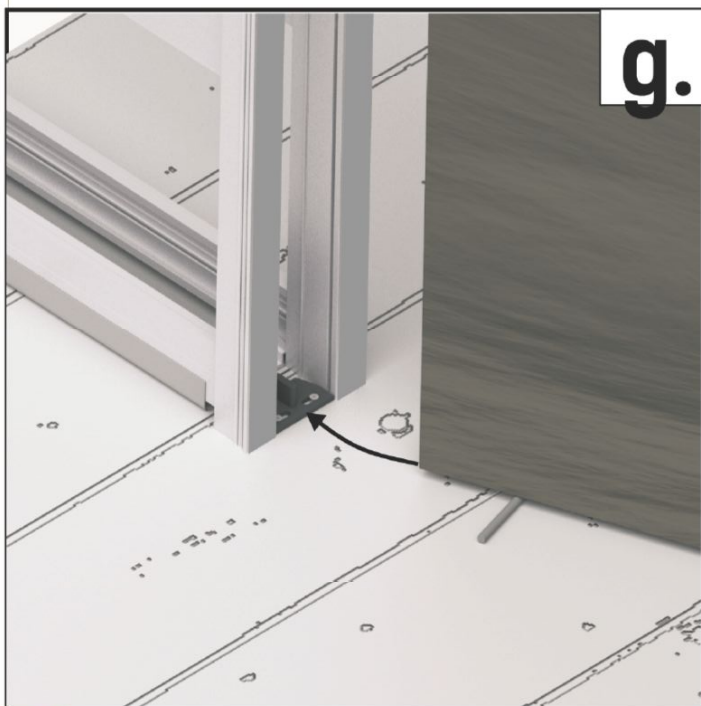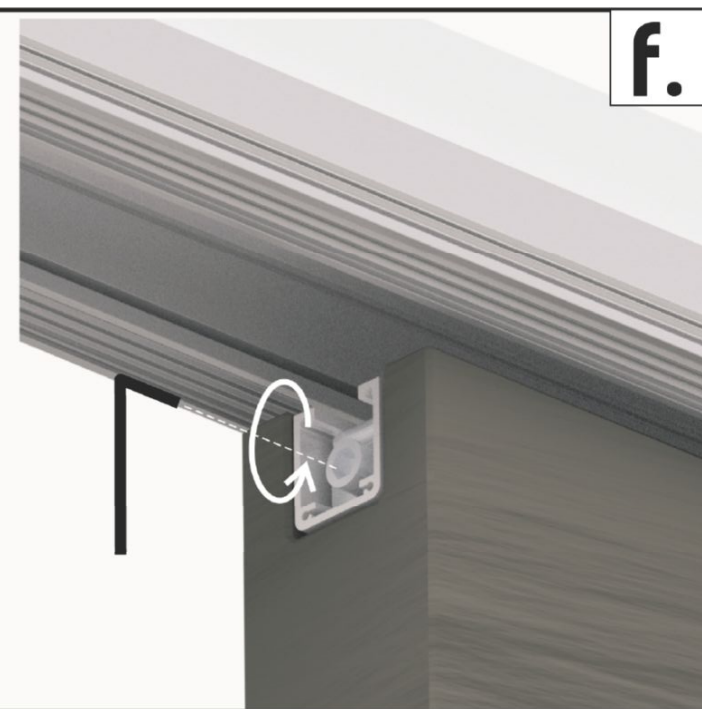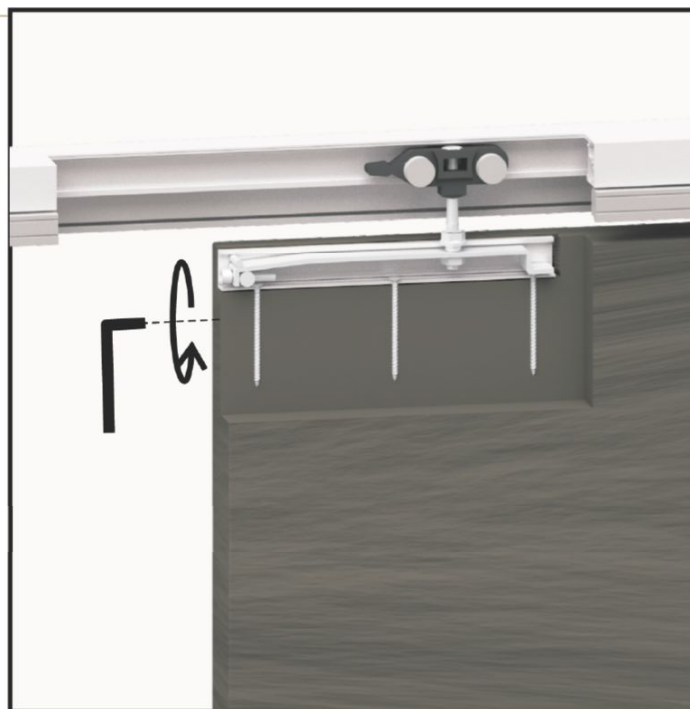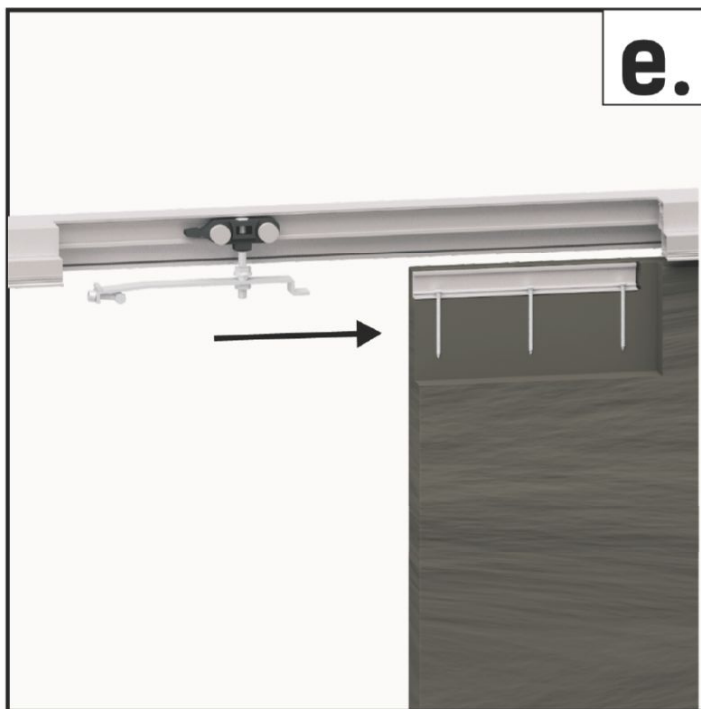

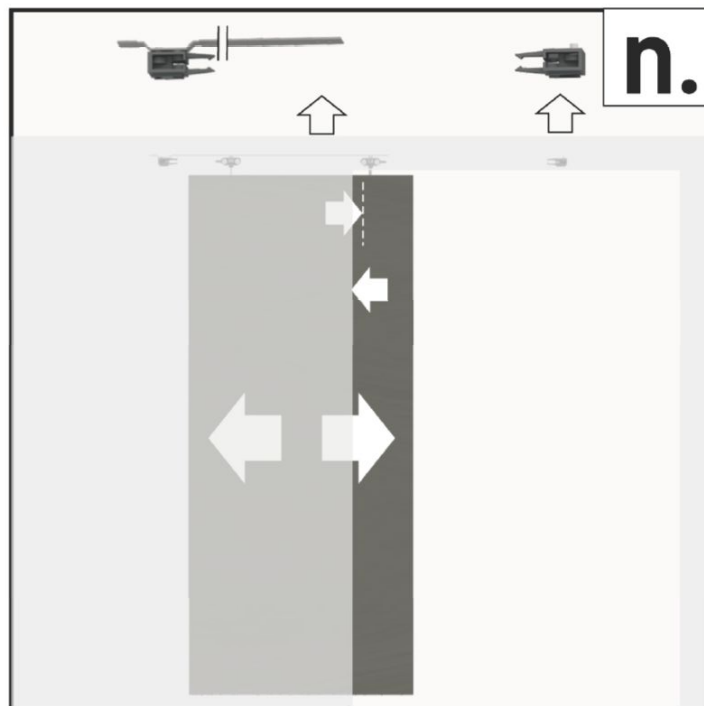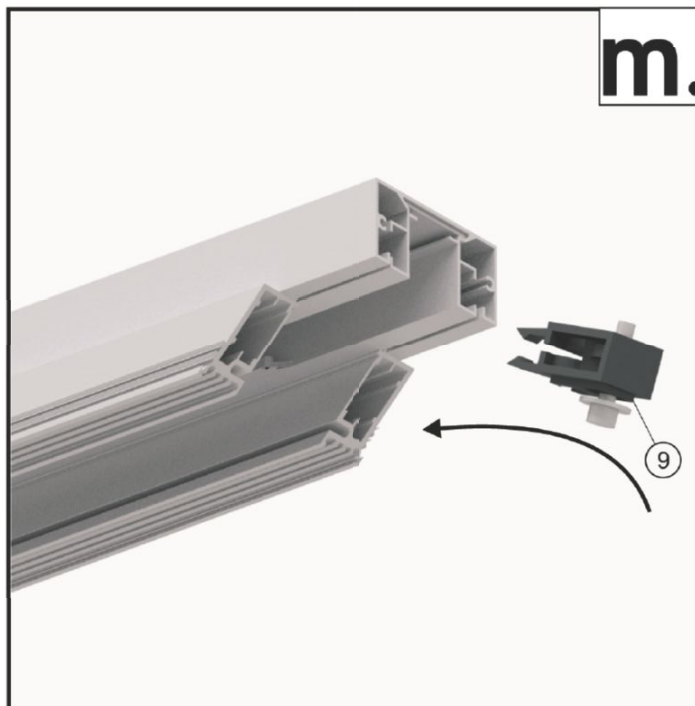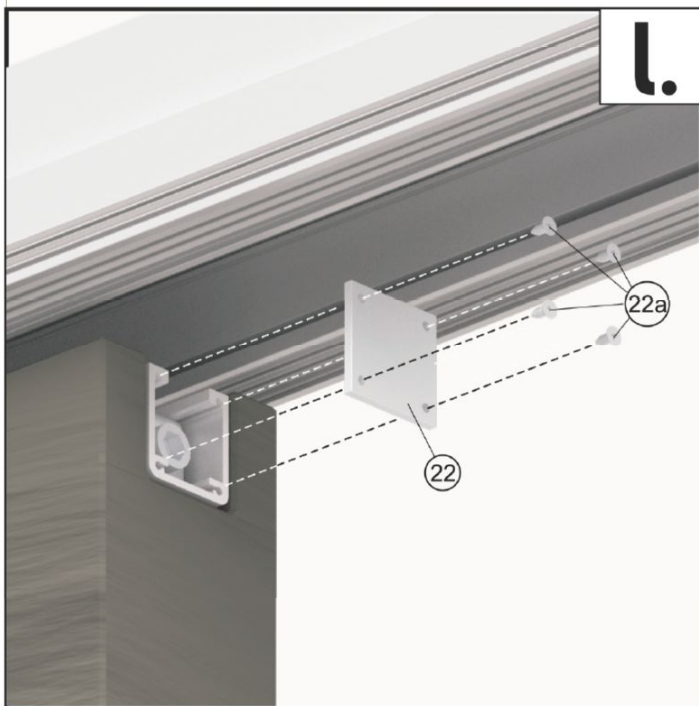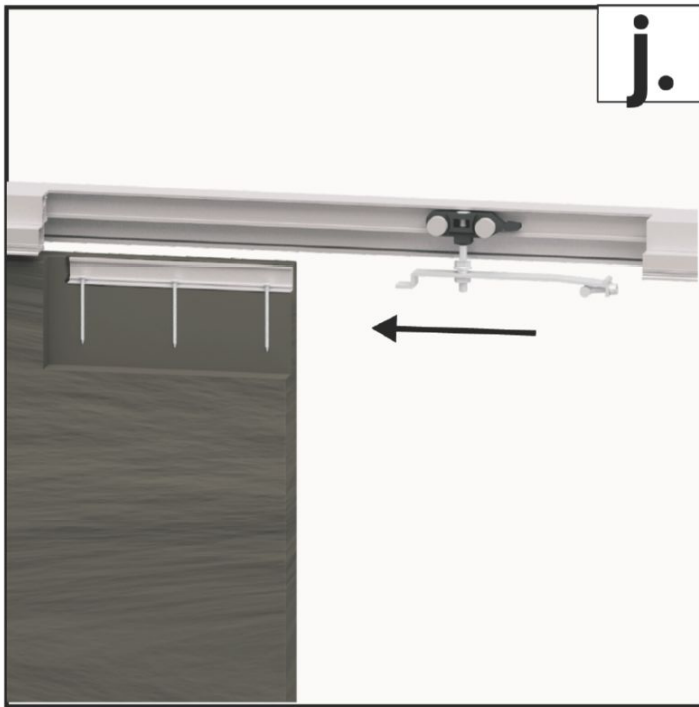


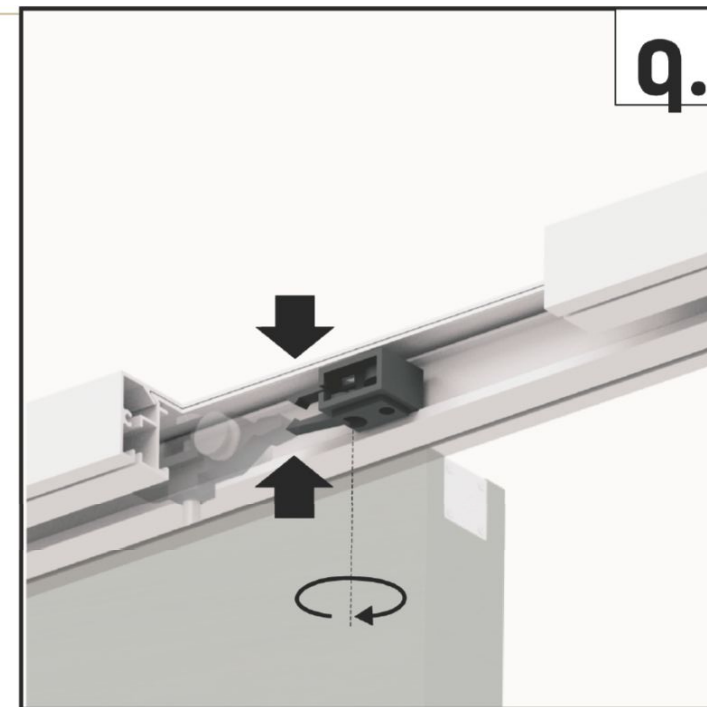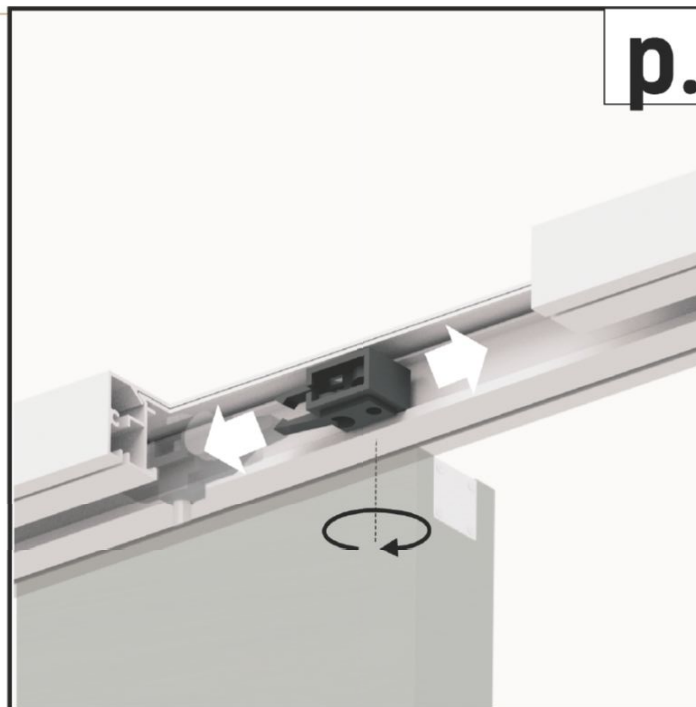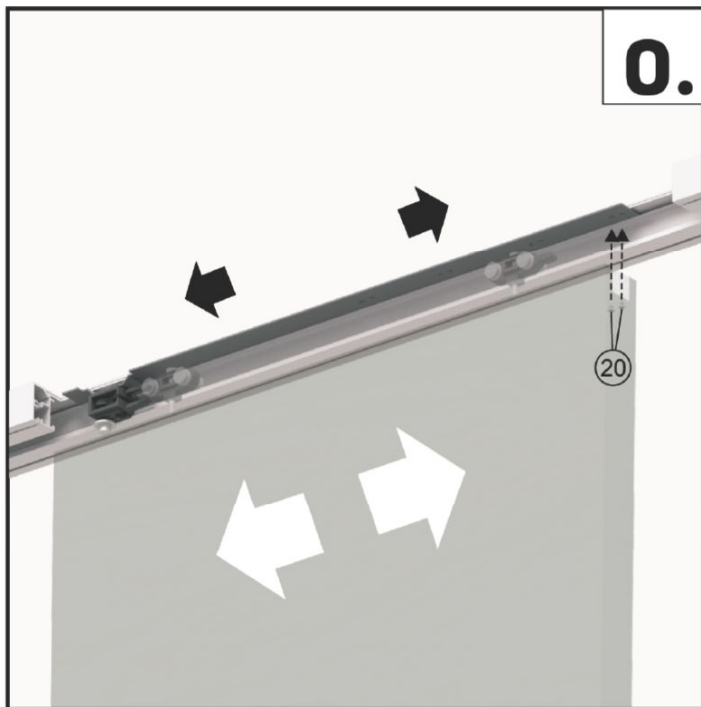


①*  x2	③a*  + ③b*  x4	⑤a  ⑤b  x2
②*  x2	④*  x4	⑥  x1

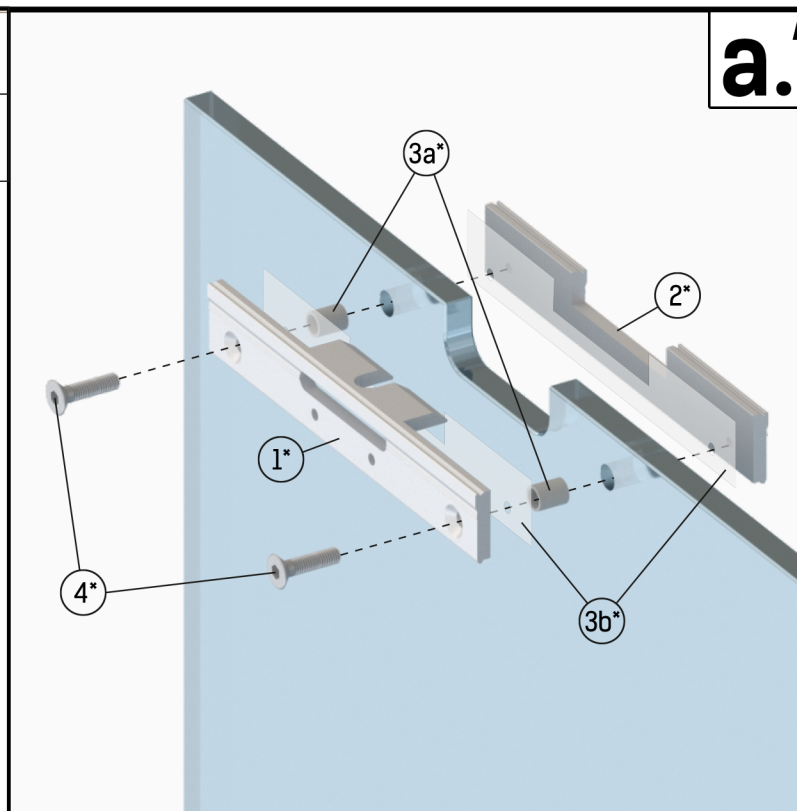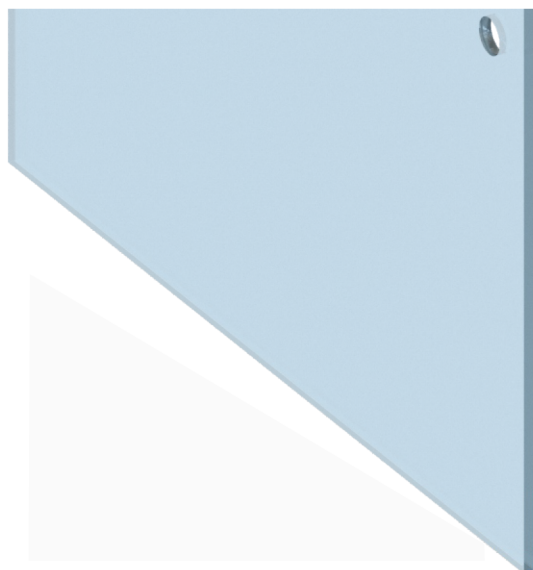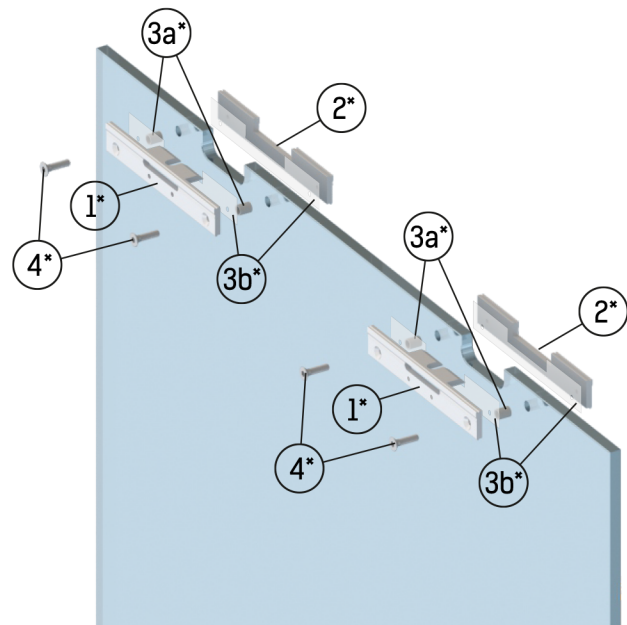

a.'

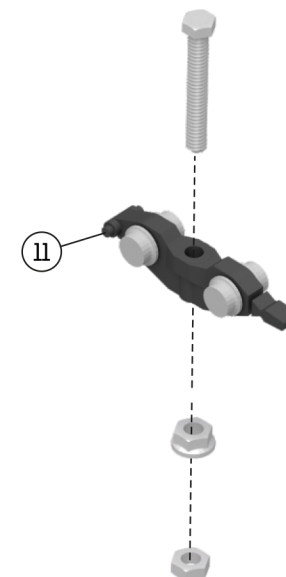

b.'

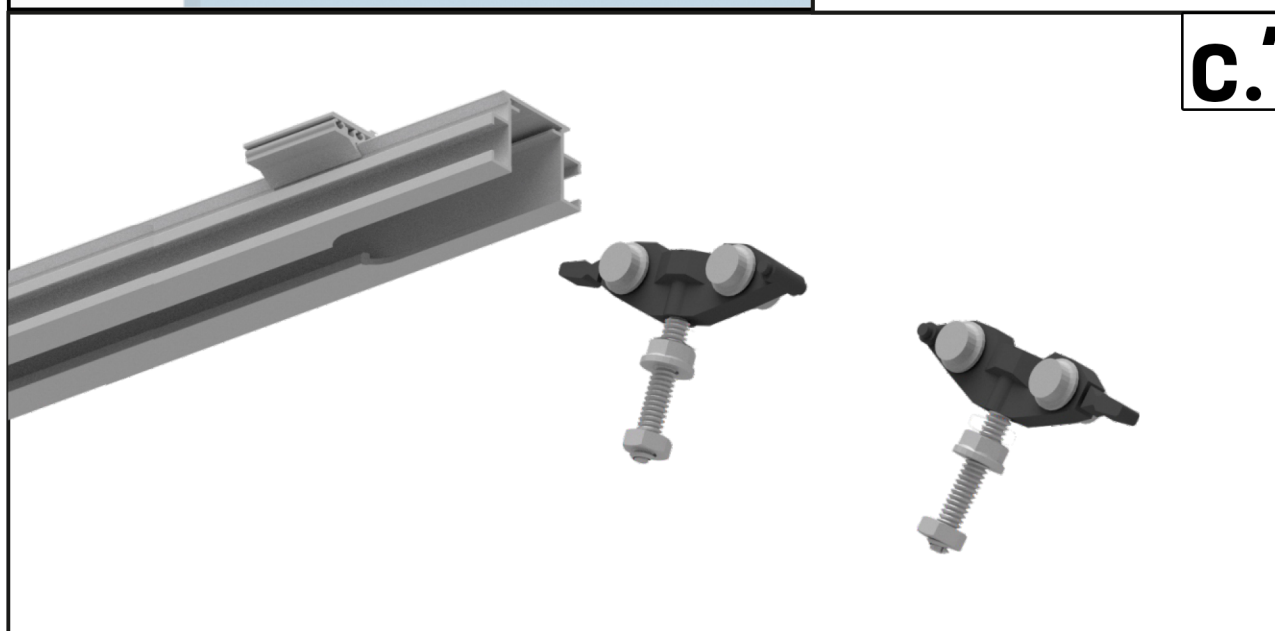

c.'

